Exit Devices 6100, 6200, 6200(M) Series

ACCENTRA


Installation Instructions

Table of Contents

A. ASSA ABLOY ACCENTRA™ Exit Device (ED) with ElectroLynx® for all Electrical Installations	. 1
B. S Function – Latch Position Monitor	. 2
C. B Function – Touchbar Monitor	. 2
D. O Function – Trim Monitor	. 3
E. P Function – Electric Latch Retraction	. 3
F. Mortise Device Trim Safe/Secure	. 4
G. Wiring Sample of Mortise Safe/Secure	. 4
H. Safe/Secure and O Function	. 5
I. G Function and O Function	. 6
J. G Function – Electric Dogging	. 6
K. Wiring Sample of G Function	. 7
L. Non-ElectroLynx® Door Preparation	. 7

A. ASSA ABLOY ACCENTRA™ ED with ElectroLynx® for all Electrical Installations

- Mount the exit device per the instruction sheet provided with the device ordered.
- Plug the exit device connector into the Raceway Harness in the door and feed through 1" (25mm) hole in door. Install rail mounting end clamp bracket with the two (2) screws that are supplied. Install the end cap.
- Plug the Raceway Harness from the edge of the door into the electric hinge connector and feed the wires back through the door preparation. Mount the electric hinge to the door.
- Wire the frame side wires to the wires on the pigtail harness on the hinge as required using the connectors allowed by local code. Plug the pigtail harness connector into the electric hinge connector. Feed the harnesses through the frame preparation and mount the electric hinge.

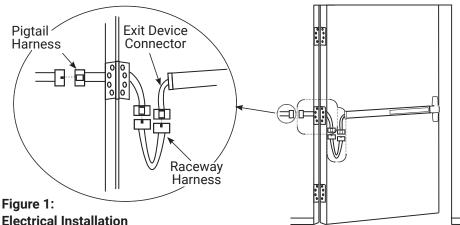

- Wiring to pigtail harness is per facility wiring requirement.
- If you do not have an ElectroLynx® System use the related instructions for your system and refer to Section L of this document.
- These instructions detail the installation of each function separately.
- The ElectroLynx® System is easy to install with plug connectors from an electric hinge through the door to the device. The only wiring required, is loose wires on the pigtail harness assembly on the frame side of the electric hinge (included with the ElectroLynx® hinge).
- Combinations of certain switches and monitors can be used.

IMPORTANT: Plug and receptacle connectors mate and lock together. Be sure the connectors plug

into each other with the locking mechanisms aligned. DO NOT FORCE CONNECTORS.

✓ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

⚠ WARNING


Attention Installer: Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire-rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.



6100, 6200, 6200(M) Series
Installation Instructions


B. S Function - Latch Position Monitor

The S Function is a bolt actuated Single Pull Double Throw (SPDT) switch. Refer to Section A and Figure 2 for installing a ASSA ABLOY ACCENTRA™ Exit Device with an ElectroLynx® System for all electrical installations. Numbers 1 through 4 in the figure directly refer to the numbers in Section A.

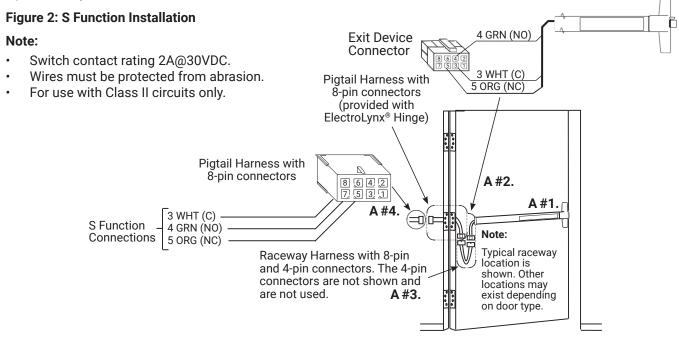

C. B Function - Touchbar Monitor

The B Function is a touchbar actuated SPDT switch which indicates egress in progress. Refer to Section A and Figure 3 for installing a ASSA ABLOY ACCENTRA $^{\text{M}}$ Exit Device with an ElectroLynx $^{\text{@}}$ System for all electrical installations. Numbers 1 through 4 in the figure directly refer to the numbers in Section A.

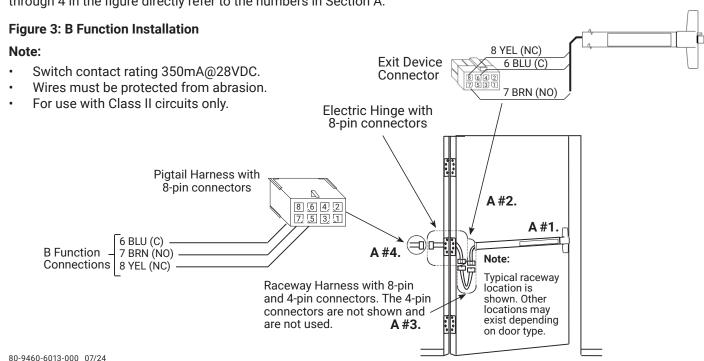

Experience a safer and more open world

1-855-557-5078 Ext. 2 • www.accentra-assaabloy.com

6100, 6200, 6200(M) Series

Installation Instructions



D. O Function - Trim Monitor

The O Function is a trim actuated SPDT switch. Refer to Section A and Figure 4 for installing a ASSA ABLOY ACCENTRA™ Exit Device with an ElectroLynx® System for all electrical installations. Numbers 1 through 4 in the figure directly refer to the numbers in Section A.

Adaptor Harness from 2 GRY (C) **Figure 4: O Function Installation** 4-pin to 8-pin connector 4 TAN (NC) O Function 3 PNK (NO) 4 TAN (NC) Note: 4 TAN (NC) Exit Device 2 GRY (C) 2 GRY (C) Switch contact rating Connector 350mA@28VDC. 3 PNK (NO) 3 PNK (NO) Wires must be protected from abrasion. Pigtail Harness with 8-pin and 4-pin connectors For use with Class II (provided with ElectroLynx® Hinge) circuits only. Pigtail Harness with 8-pin connectors A #2. 8 6 3 2 A #4. A #1. 7 5 4 1 RED (C) O Function 3 WHT (NO) Note: Connections 4 GRN (NC) Typical raceway location is Raceway Harness with 8-pin shown. Other and 4-pin connectors. The 4-pin locations may connectors are not shown and exist depending are not used. A #3. on door type.

E. P Function - Electric Latch Retraction

The P Function has Electric Latch Retraction. Refer to Section A and Figure 5 for installing a ASSA ABLOY ACCENTRA™ Exit Device with an ElectroLynx® System for all electrical installations. Numbers 1 through 4 in the figure directly refer to the numbers in Section A.

Figure 5: P Function Installation Note: P Function Solenoid (.172A seated) 10A Exit Device 2 RED (+) Connector inrush, requires 782 Controller (any other 1 BLK (-Power Supply voids Device Warranty). Wires must be protected from abrasion. Electric Hinge For use with Class II circuits only. with 8-pin connectors 1 BLK (-) P Function 2 RED (+ Connections A #2. Pigtail Harness with 8-pin connectors A #4. A #1. Note: Raceway Harness with 8-pin Typical raceway and 4-pin connectors. The 4-pin location is connectors are not shown and shown. Other

are not used.

Δ #3

80-9460-6013-000 07/24

Experience a safer and more open world

locations may exist depending on door type.




Exit Devices 6100, 6200, 6200(M) Series

Installation Instructions

F. Mortise Device Trim Safe/Secure

Refer to Section A and Figure 6 for installing a ASSA ABLOY ACCENTRA™ Exit Device with an ElectroLynx® System for all electrical installations. Numbers 1 through 4 in the figure directly refer to the numbers in Section A. Figure 6 gives a sample of the wiring.


Figure 6: Mortise Device Trim Safe/Secure Installation

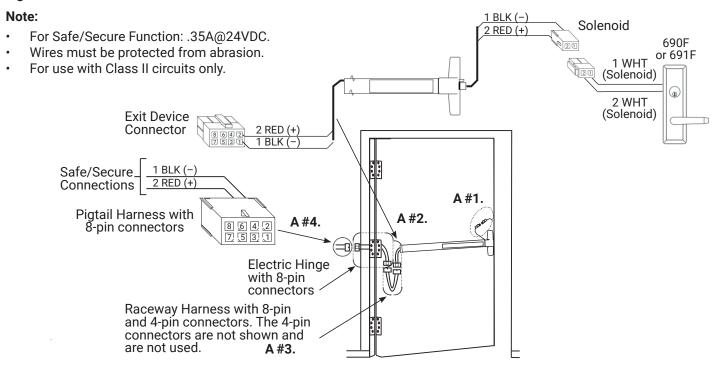

G. Wiring Sample of Mortise Safe/Secure

In Figure 7, the 12 or 24VDC regulated and filtered power supply wiring shows power on and locked in a secure state.

Figure 7: Sample Wiring of Mortise Safe/Secure

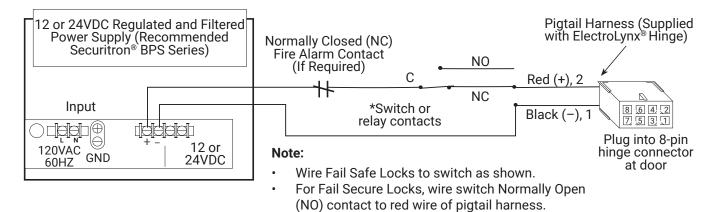

6100, 6200, 6200(M) Series


Installation Instructions



H. Safe/Secure and O Function

Refer to Section A and Figure 8 for installing a ASSA ABLOY ACCENTRA™ Exit Device with an ElectroLynx® System for all electrical installations. Numbers 1 through 4 in the Figure 7 directly refer to the numbers in Section A. Figure 6 gives a sample of the wiring.

Figure 8: Safe/Secure and O Function Installation

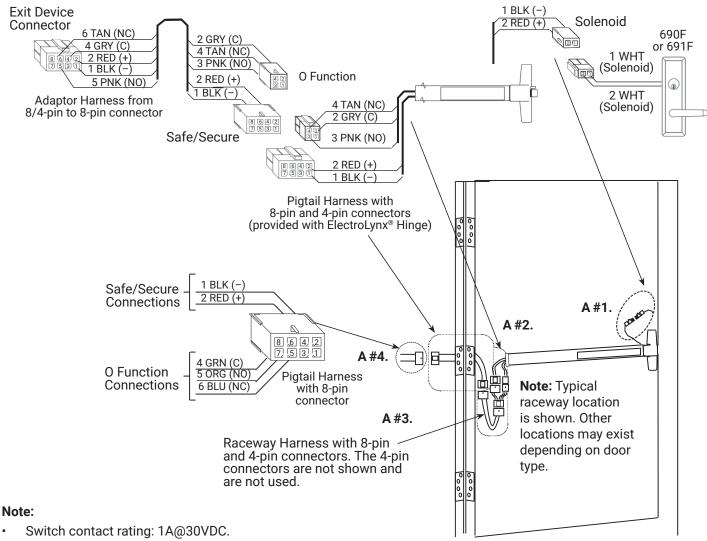


- For Safe/Secure Function: .35A@24VDC.
- Wires must be protected from abrasion.
- For use with Class II circuits only.



6100, 6200, 6200(M) Series Installation Instructions

I. G Function and O Function

Refer to Section A and Figure 8 for Installing a ASSA ABLOY ACCENTRA™ Exit Device with an ElectroLynx® System for all electrical installations. Numbers 1 through 4 in Figure 9 directly refer to the numbers in Section A. Figure 11 gives a sample of the wiring.

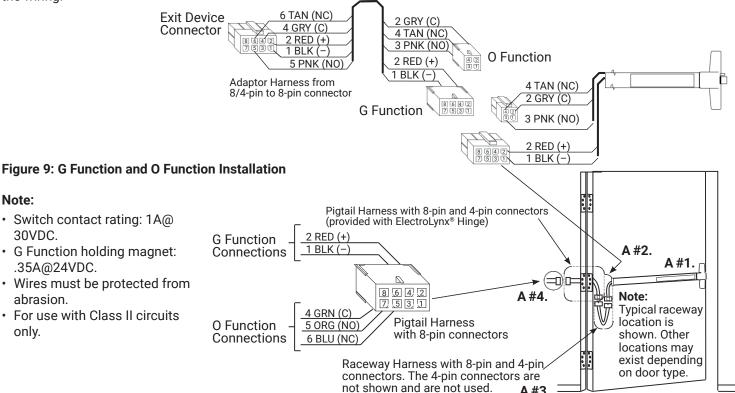


J. G Function - Electric Dogging

Refer to Section A and Figure 10 for Installing a ASSA ABLOY ACCENTRA™ Exit Device with an ElectroLynx® System for all electrical installations. Numbers 1 through 4 in the figure directly refer to the numbers in Section A. Figure 11 gives a sample of the wiring.

Figure 10: G Function Installation

Note:

- G Function holding magnet: .35A@ 24VDC.
- Wires must be protected from abrasion.
- · For use with Class II circuits only.

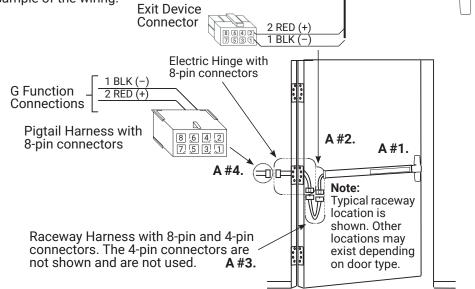

1-855-557-5078 Ext. 2 • www.accentra-assaabloy.com

80-9460-6013-000 07/24

Experience a safer and more open world

6100, 6200, 6200(M) Series


Installation Instructions



K. Wiring Sample of G Function

Once wiring is complete, turn the control switch on to apply power to the device. The first depression on the pushpad will retract the latchbolt and hold the pushpad in a dogged position. Fire alarm activation, power interruption or turning the control switch off will release the pushpad and relatch the device (Figure 11).

Figure 11: Sample Wiring of G Function

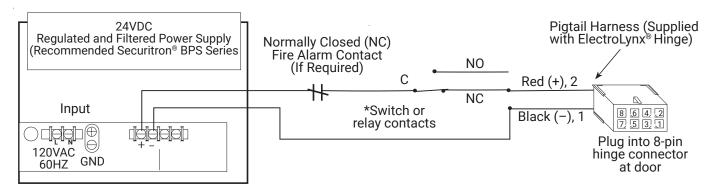

L. Non-ElectroLynx® Door Preparation

To install a non-ElectroLynx® door, remove the connector at the end of the ASSA ABLOY ACCENTRA™ Exit Device and connect those wires to the incoming wires from the power source using wire nuts, butt splices, etc. (Figure 12).

Note:

- Do not scale drawing.
- LHR Hollow Metal (HM) opening shown.
 Details are typical for all opening materials (both hands).
- This preparation is an addition to preparation shown on device template.
- See device template to locate centerline of device.
- Shields for wiring access recommended for insulated and composite doors.
- Refer to device instructions with ordered product for door preparation and template information.

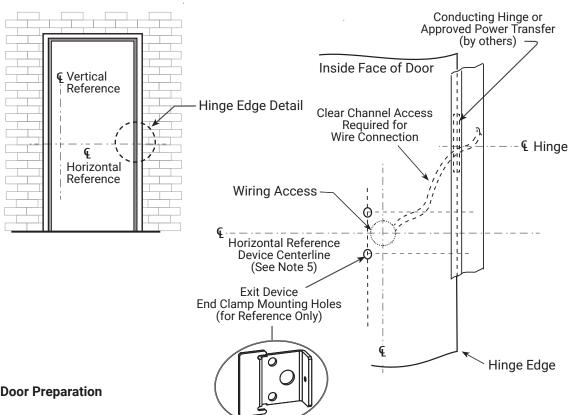


Figure 12: Non-ElectroLynx® Door Preparation

1-855-557-5078 Ext. 2 • www.accentra-assaabloy.com

Experience a safer and more open world

