

INSTALLATION INSTRUCTIONS

53- Prefix (Latch Monitor Switch) 80 Series Exit Device to ElectroLynx™ Connector System

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 800-810-WIRE (9473) • www.sargentlock.com


A. Function

The 53- prefix latchbolt monitor switch provides positive indication of latchbolt extension or retraction when the push rail is depressed, dogged or if the latch bolt itself is depressed.



B. Important

1. **Caution:** Disconnect all input power before beginning installation to prevent electrical shock and equipment damage.
2. Installer must be a trained, experienced service person.
3. All wiring must comply with applicable local electrical codes, ordinances and regulations.

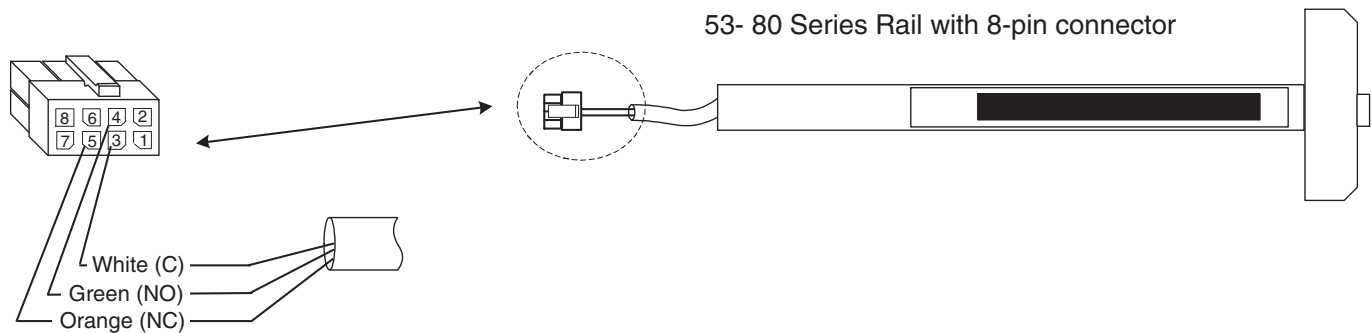


C. ElectroLynx Connector System Notes:

The system is designed to be installation friendly with quick connectors from the electric hinge through the door to the rail. The only wiring required is to the loose wires on the pigtail harness assembly on the frame side of the electric hinge.

IMPORTANT:

The plug and receptacle connectors are designed to mate and lock together as shown in the figure. Plug the connectors into each other with the locking mechanism aligned as indicated.

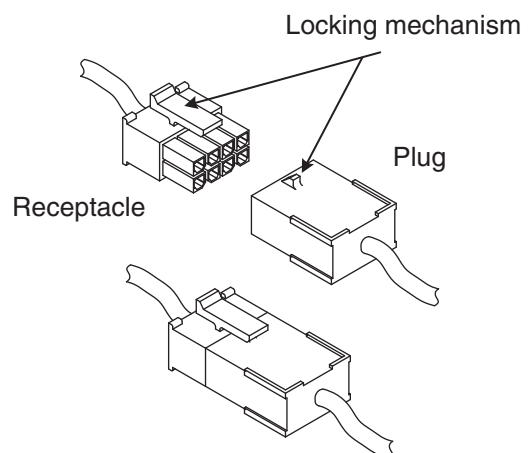


Do NOT force connectors on any other way.

D Installation Notes

1. With new applications, a raceway harness with 8 and 4 pin connectors will be pre-installed inside door by ASSA ABLOY door manufacturer when specified during ordering process. Raceway harness kits are also available for retrofit applications.
2. If door does not have a raceway harness with connectors, cut connectors off product, or consult factory for raceway retrofit kit.
3. Wiring to pigtail harness is per facility wiring requirement. The rail, raceway, electric hinge and pigtail connector terminations and wire colors all match.

E. 53- 80 Series (Latch Bolt Monitoring Switch) Installation and Wiring

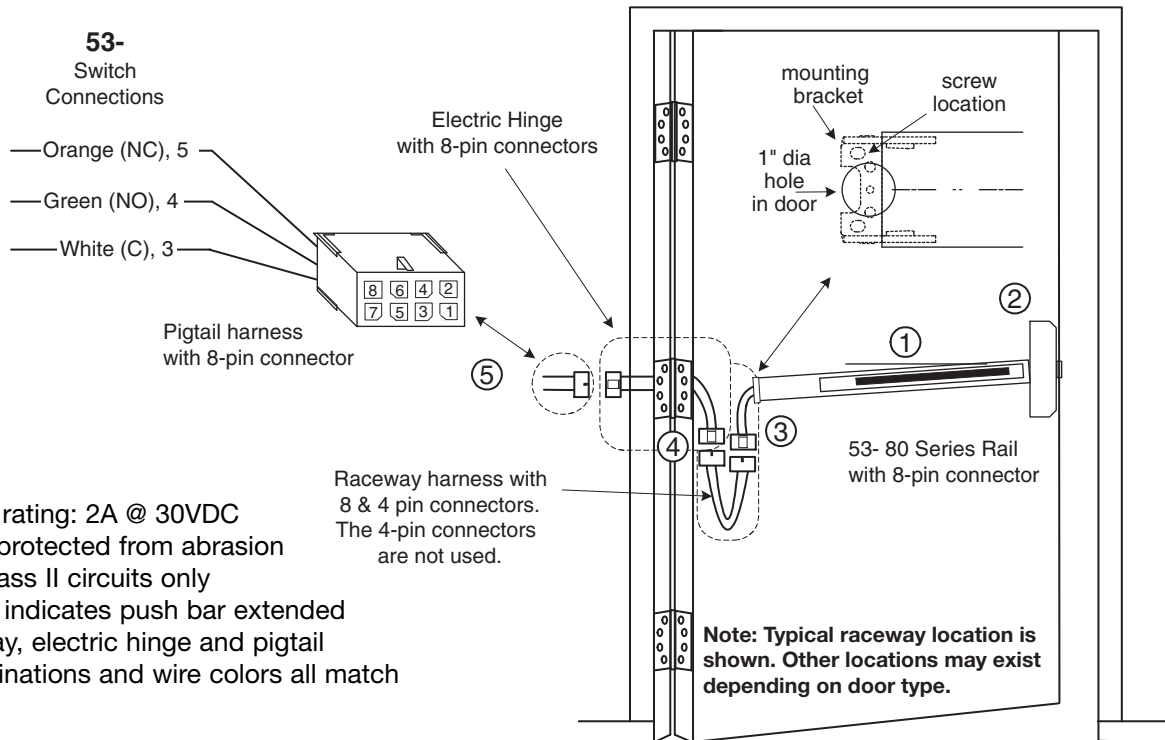

NOTES:

1. Switch contact rating: 2A @ 30VDC
2. Wires must be protected from abrasion
3. For use with Class II circuits only
4. Wiring diagram indicates push bar extended
5. The rail, raceway, electric hinge and pigtail connector terminations and wire colors all match

1. Mount exit device per instruction sheet provided

To insure trouble free operation, check that the push rail can be fully depressed. On vertical rod exit devices, check that the latch bolts do not go into hold back position until the push rail is fully depressed.

2. Plug chassis connector into rail connector and locate away from moving rail components.
3. Plug rail connector into raceway connector then feed through 1" hole in door. Install rail mounting bracket with two screws supplied. Install rail insert and end cap.
4. Plug raceway connector into electric hinge connector, then feed through door prep. Mount electric hinge to door.
5. Go to (A) if wiring now. Go to (B) if wiring is to be done later.
 - A. Wire loose frame side wires to loose wires on pigtail harness as required using connectors allowed by local code. Plug pigtail harness connector into electric hinge connector. Feed harnesses through frame prep and mount electric hinge.
 - B. Plug pigtail harness connector into electric hinge connector. Feed harnesses through frame prep and mount electric hinge.