


**Notes:**

1. Do not scale drawing.
2. Dimensions are in inches (mm).
3. LHR active pair shown. Preparation is typical for both hands.
4. Minimum door stile width: 4-1/2 (114).
5. Prepare mounting holes when installing the device.
6. For square door edges, or other center clearance, compensate locating dimensions as required to maintain strike to device distance shown.
7. For recommended door reinforcements see template 7400-0000. Unreinforced doors require SNB option to mount the hardware.
8. Holes for optional SNB: 9/32(7.00) dia., inside door face; 3/8(9.50) dia., outside door face.
9. Provide door stiffeners, as needed to prevent door collapse due to installation with power tools, door use, or abuse.
10. Device mount to hinge stile (not shown) requires holes location and preparation during device installation.
11. For trim preparation see appropriate trim template.
12. For electrical devices (suffixes "-B", "-G", "-O", "-P", "-S") also see template 7477-0001.

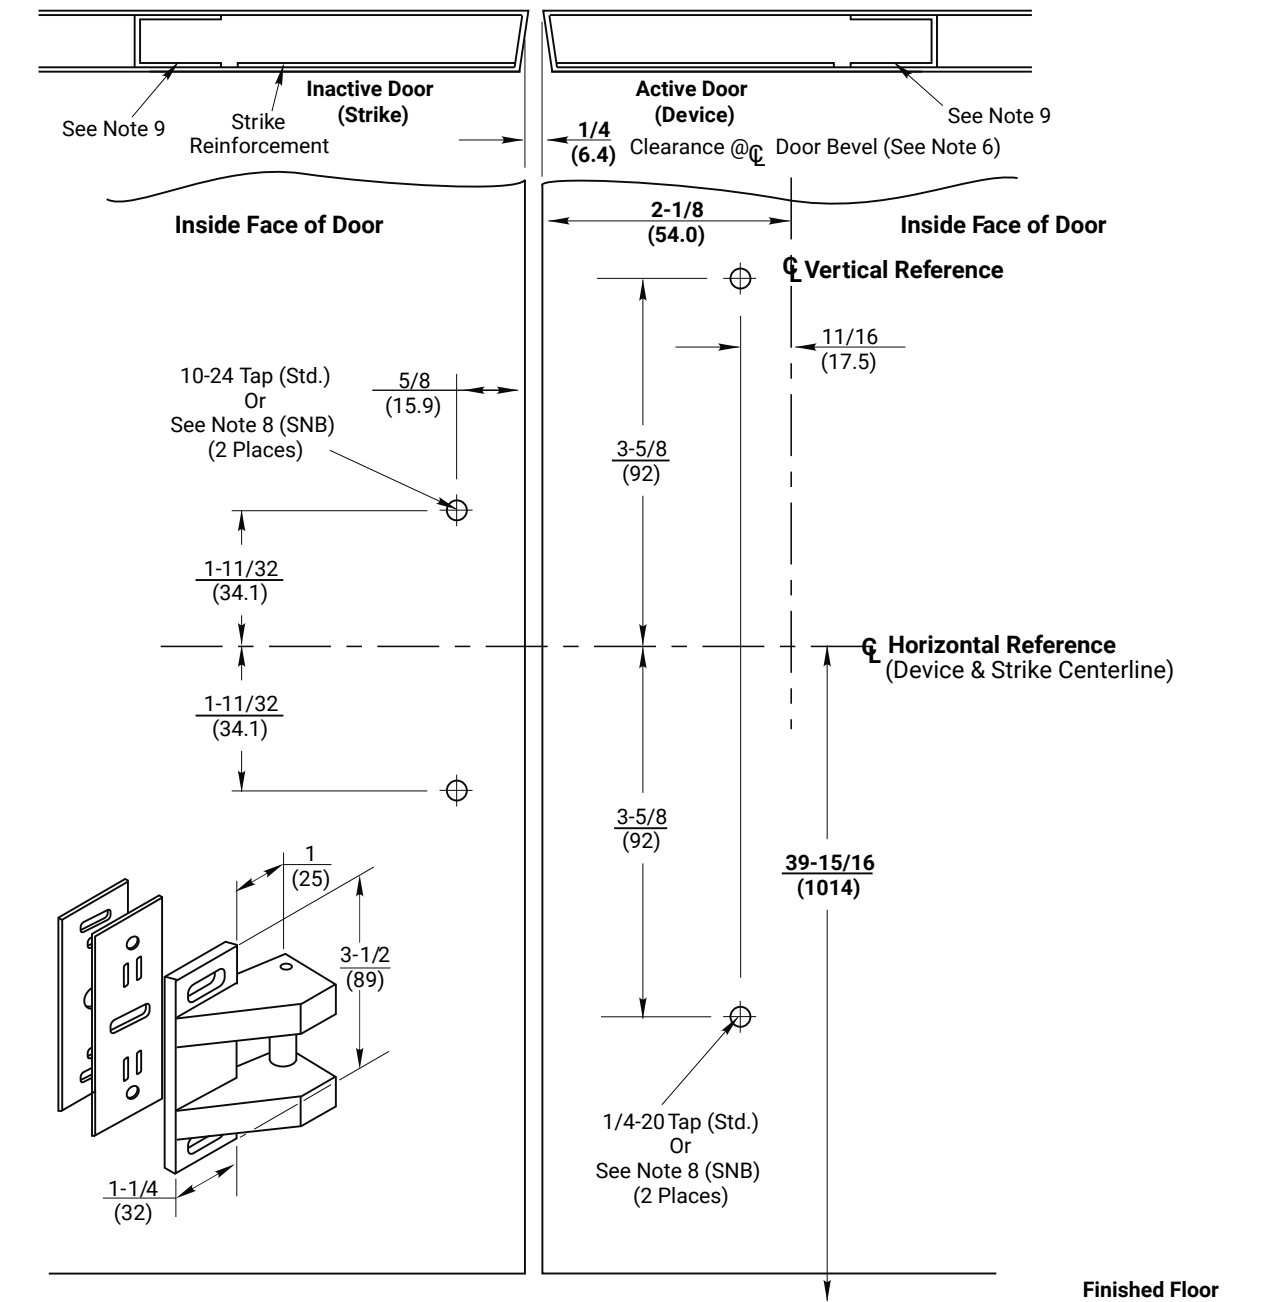

**RESPONSIBILITY**  
DOOR AND FRAME MANUFACTURERS ARE RESPONSIBLE FOR PROVIDING ADEQUATE CONSTRUCTION OR REINFORCEMENTS FOR PROPER INSTALLATION OF HARDWARE SHOWN. ALL ARCHITECTURAL BUILDERS HARDWARE MUST BE INSTALLED ON PROPERLY REINFORCED DOORS AND FRAMES, REGARDLESS OF TYPE, MATERIAL, OR METHOD OF CONSTRUCTION.

**6100, 6105, 7100 or 7105**  
**Rim Exit Devices with Optional 793 Strike**  
Application to Pair of Metal Doors without Mullion  
(Not for Fire Labeled Devices)  
1-855-557-5078 Ext. 2  
www.accentra-assaabloy.com

**ACCENTRA**  
**ASSA ABLOY**

Experience a safer  
and more open world

Copyright © 1999, 2015, 2024, ASSA ABLOY ACCENTRA™ Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

SUPERSEDES 7470-0793 01/24	DO NOT SCALE DRAWING	
TEMPLATE NUMBER 7470-0793	SHEET 1 of 1	DATE 05/24