



2580 Lever Re- Key Supplemental Instruction

- 1** Insert the key into the outside lever and install it onto the chassis as far as it will go.

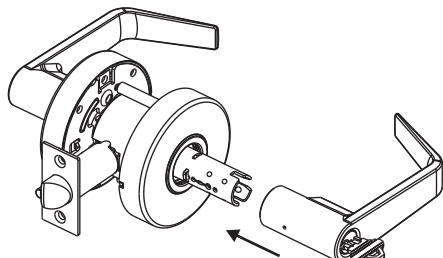

- 2** Turn and hold key at a 45°~90° degree clockwise position ◦

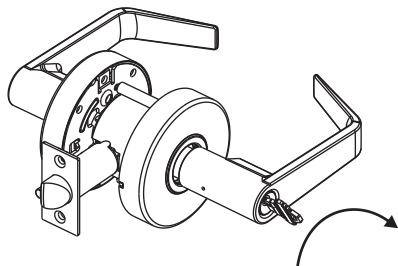

- 3** ① Push the outside lever onto the chassis until the catch engages in lever.
② Turn the key back to the horizontal position.

