


# 3800 SERIES ARMOR FRONT & STRIKE DIMENSIONS

## FOR SECTIONAL AND ESCUTCHEON MODELS

### SQUARE CORNER SHOWN

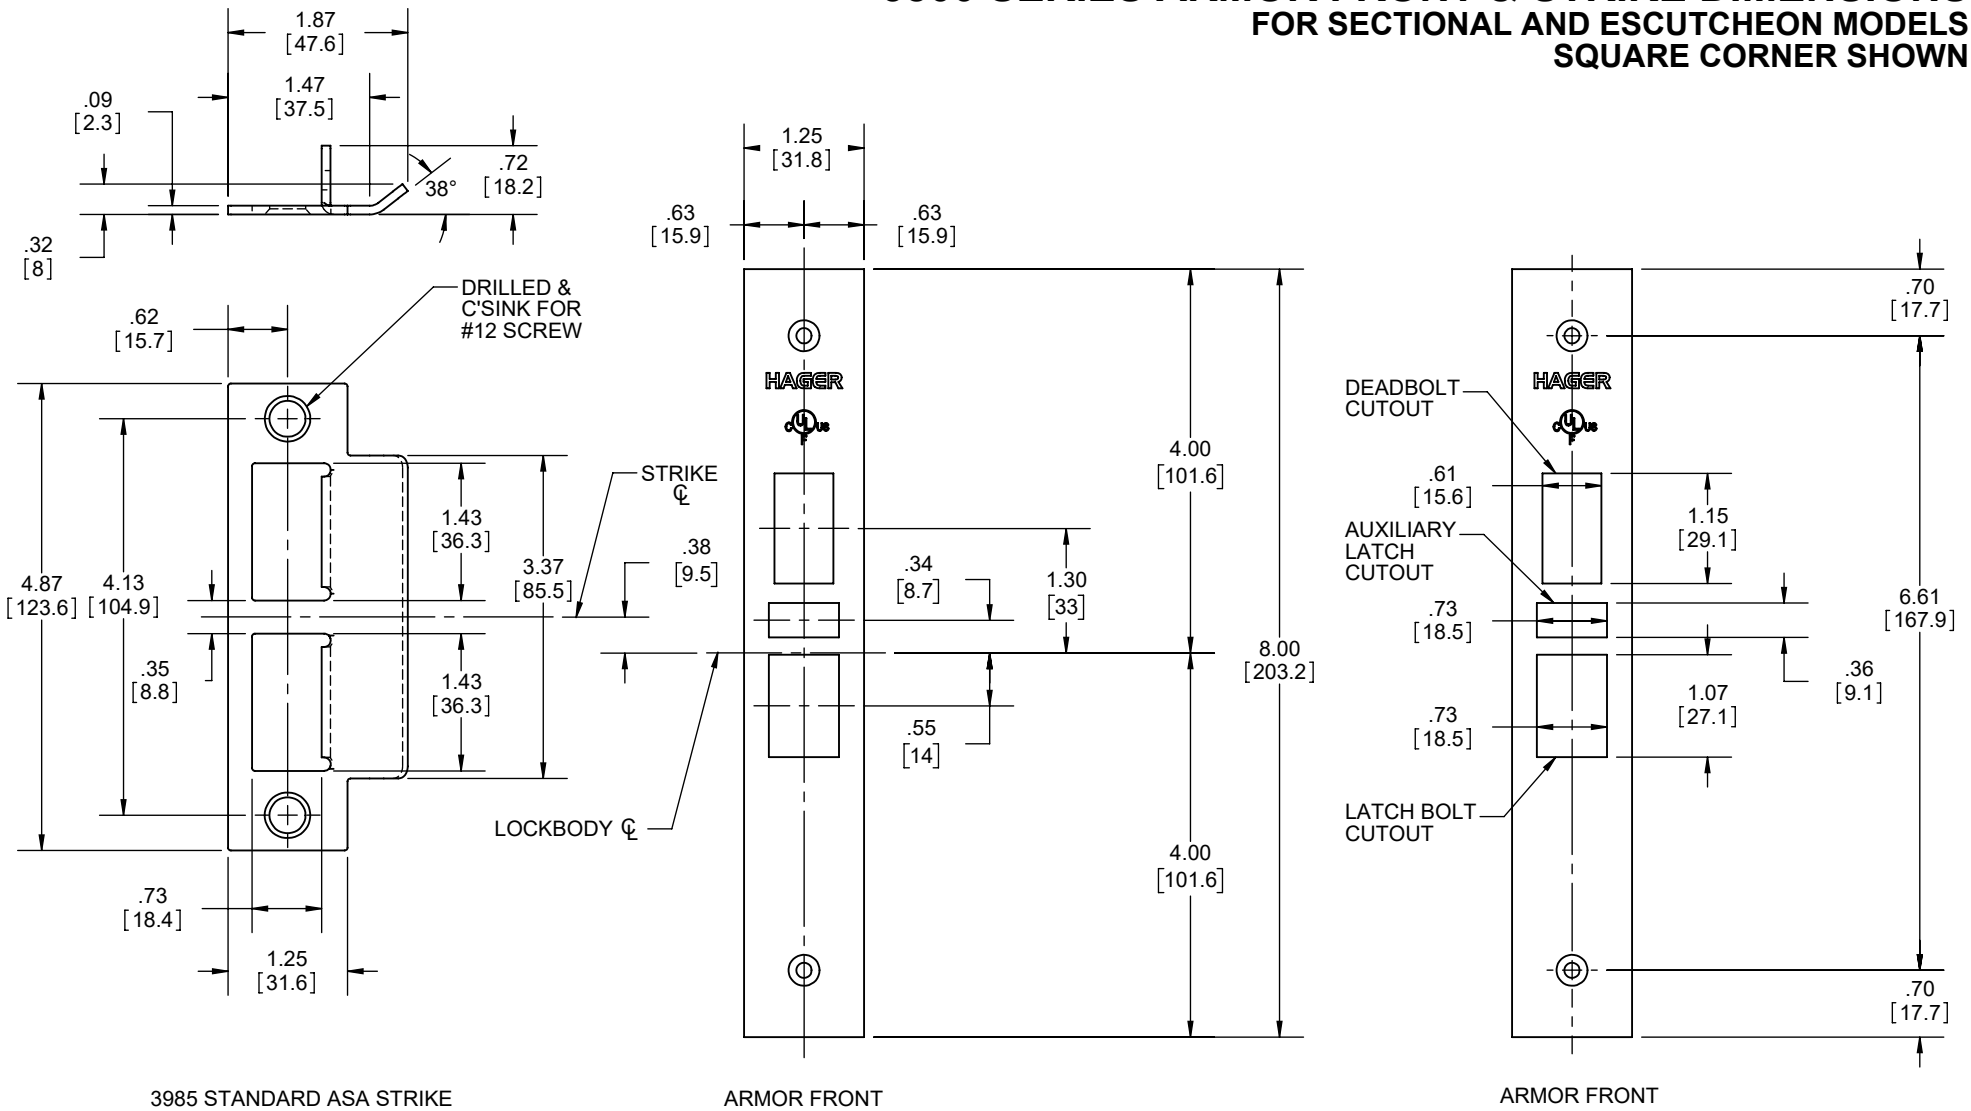

3985 STANDARD ASA STRIKE

ARMOR FRONT

ARMOR FRONT

LATCH x AUX LATCH x DEADBOLT




FUNCTIONS:  
3853  
3881

LATCH x AUX LATCH




FUNCTIONS:  
3850  
3861  
3870  
3880  
3882

LATCH x DEADBOLT




FUNCTIONS:  
3856  
3857

LATCH ONLY



FUNCTIONS:  
3810  
3840  
3844  
3896

DEADBOLT ONLY




FUNCTIONS:  
3860  
3862  
3863  
3864



# 3800 SERIES ARMOR FRONT & STRIKE DIMENSIONS

## FOR SECTIONAL AND ESCUTCHEON MODELS

ROUND CORNER SHOWN

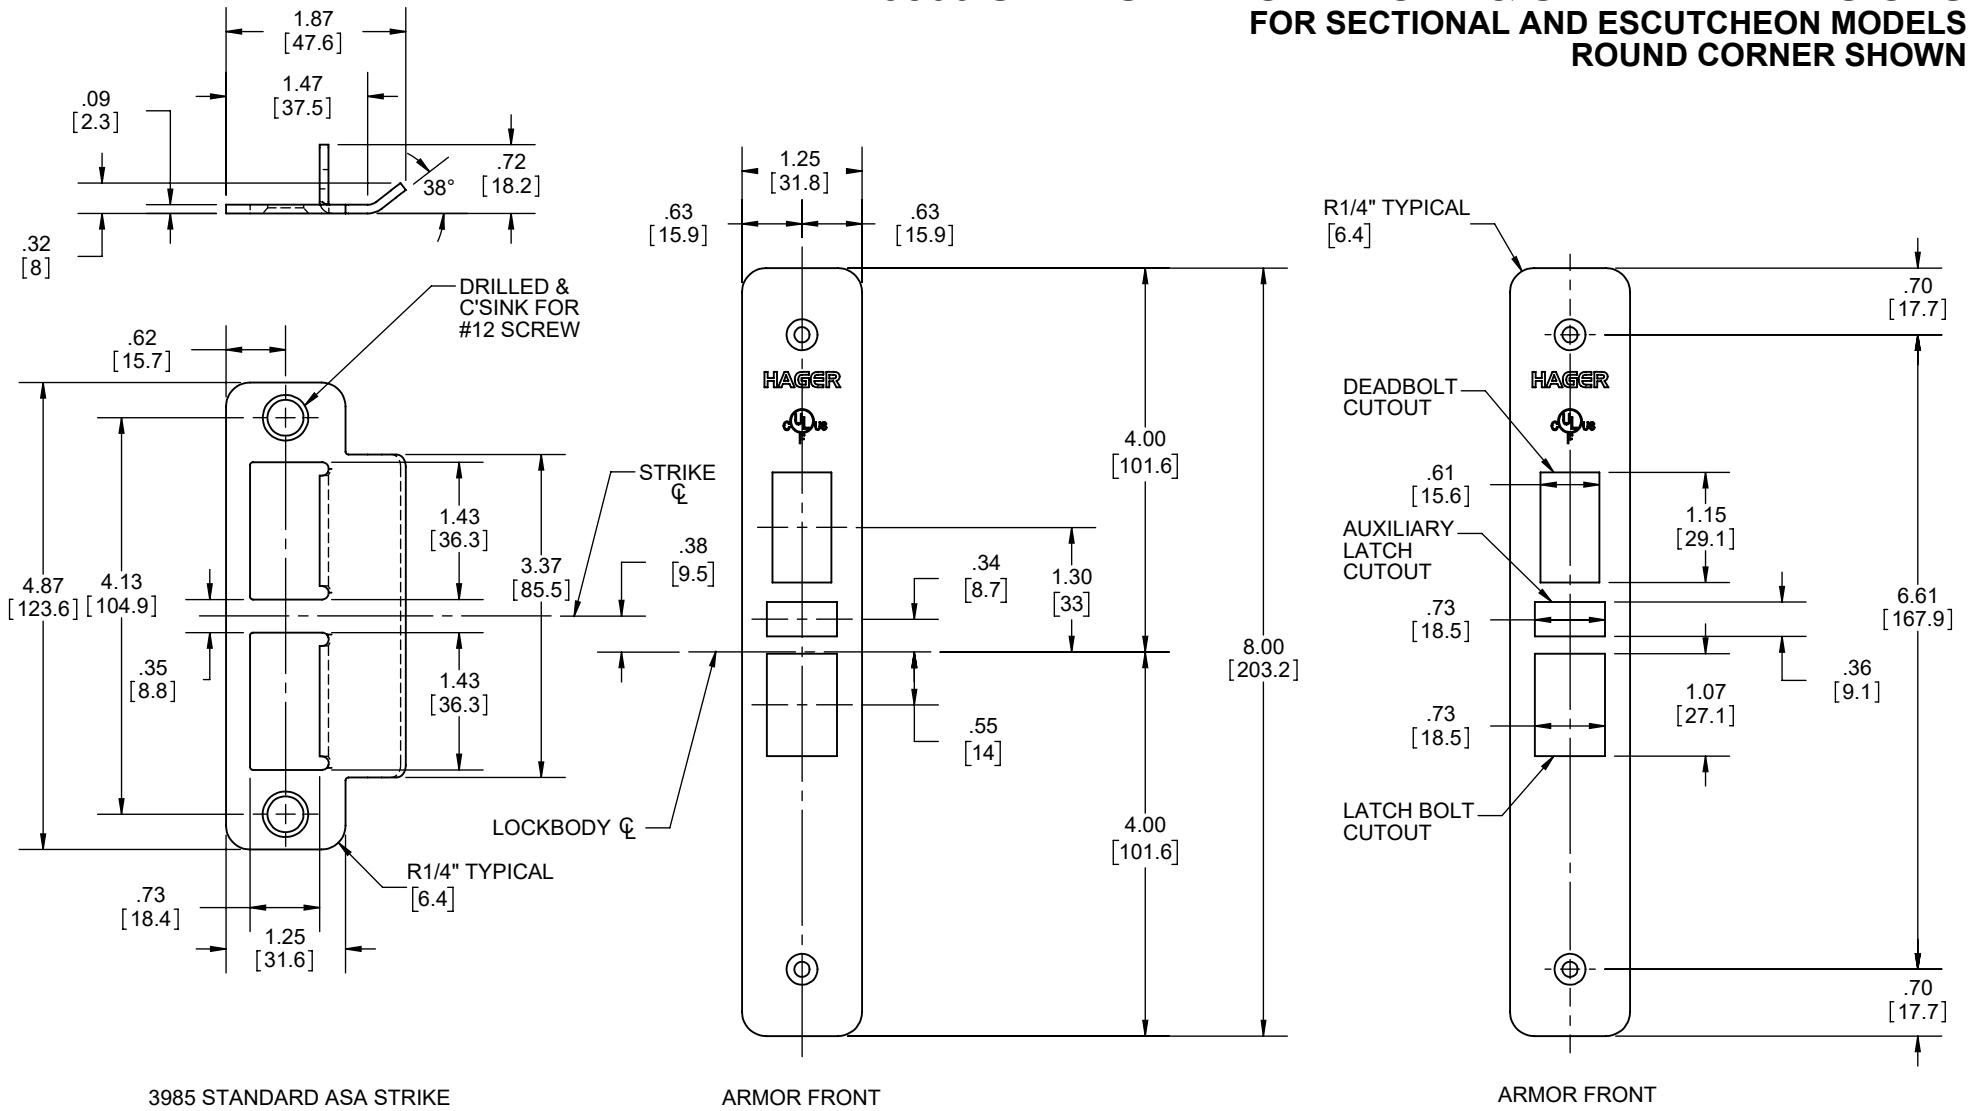

3985 STANDARD ASA STRIKE

ARMOR FRONT

ARMOR FRONT

LATCH x AUX LATCH x DEADBOLT

LATCH x AUX LATCH

LATCH x DEADBOLT

LATCH ONLY


DEADBOLT ONLY




FUNCTIONS:  
3853  
3881




FUNCTIONS:  
3850  
3861  
3870  
3880  
3882



FUNCTIONS:  
3856  
3857



FUNCTIONS:  
3810  
3840  
3844  
3896



FUNCTIONS:  
3860  
3862  
3863  
3864

