


<p><b>SINGLE DOOR</b></p> <p>DOOR</p> <p>VERTICAL CENTERLINE OF CENTER CASE</p> <p>STRIKE #603</p> <p>STRIKE #641</p> <p>A = 2 1/4"</p> <p>STRIKE #632</p> <p>A = 1 1/2"</p>	<p><b>DOUBLE DOORS WITH 980 MULLION</b></p> <p>DOOR</p> <p>VERTICAL CENTERLINE OF CENTER CASE</p> <p>2 1/4"</p> <p>INSTALL MULLION BEFORE INSTALLING EXIT DEVICE</p> <p>USE #641 STRIKE</p>	<p><b>DOUBLE DOORS WITH NO MULLION</b></p> <p>DOOR</p> <p>VERTICAL CENTERLINE OF CENTER CASE</p> <p>2 1/4"</p> <p>STRIKE #644</p>	<p><b>IDENTIFICATION OF PARTS</b></p> <p>BRACKET COVER</p> <p>BRACKET CHASSIS</p> <p>CROSS BAR</p> <p>BAR LOCKING KEY</p> <p>CENTER CASE CHASSIS</p> <p>CENTER CASE COVER</p> <p>COVER MOUNTING SCREWS</p>	<p><b>4 REMOVE COVER FROM CENTER CASE CHASSIS AND MOUNT CHASSIS TO DOOR</b></p> <p><b>NOTE METHOD OF SECURING CYLINDER TO DOOR.</b></p> <p>THIS METHOD ALLOWS CYLINDER TO BE REMOVED AT A LATER DATE FOR REKEYING WITHOUT TAKING DEVICE OFF DOOR.</p> <p><b>NOTE: USE CYLINDER BACK PLATE FOR OTHER THAN SARGENT RIM CYLINDER.</b></p>
<p><b>1 MARK VERTICAL CENTERLINE ON DOOR ACCORDING TO TYPE OF INSTALLATION AND STRIKE USED. (SEE ILLUSTRATIONS ABOVE)</b></p> <p><b>2 LOCATE AND PLACE TEMPLATES AS FOLLOWS:</b></p> <p>A. STICK CENTER CASE TEMPLATE ON DOOR (SEE DIMENSIONS ON TEMPLATE TO OBTAIN CORRECT HEIGHT FROM FINISHED FLOOR.)</p> <p>B. USING CROSS BAR HOLE CENTERS FOR MEASURING, LOCATE VERTICAL CENTERLINE OF BRACKET. (SEE DIMENSIONS ON TEMPLATE TO OBTAIN CORRECT HEIGHT FROM FINISHED FLOOR.)</p> <p>OBTAIN DIMENSION TO FINISHED FLOOR FROM TEMPLATE</p> <p>LOCATE TEMPLATES THIS DISTANCE APART</p> <p>INSIDE FACE OF DOOR</p> <p>VERTICAL CENTERLINE OF CENTER CASE</p> <p>TAPE</p> <p>VERTICAL <math>\phi</math> OF BRACKET</p> <p>HORIZONTAL <math>\phi</math> OF BRACKET HOLES.</p> <p>INSIDE FACE OF DOOR</p>			<p><b>5 ATTACH OUTSIDE TRIM WHEN USED</b></p> <p>ATTACH CENTER CASE COVER TO CHASSIS WITH FOUR MOUNTING SCREWS</p> <p>NOTE: TOP GRIP SCREW GOES THRU CHASSIS INTO GRIP</p> <p>CUP WASHER</p> <p>FLUSH TO 1/4"</p>	
<p><b>3 DRILL AND CUT HOLES AS DIRECTED ON TEMPLATE</b></p>			<p><b>6 MOUNT BRACKET CHASSIS ON DOOR AND ATTACH BRACKET COVER TO CHASSIS.</b></p> <p><b>7 ASSEMBLE AND SECURE CROSS BAR TO ARMS.</b></p> <p><b>8 MOUNT STRIKE IN CENTRAL POSITION TO ALLOW FOR FUTURE ADJUSTMENTS.</b></p> <p>COVER MOUNTING SCREWS</p>	

THIS EXIT DEVICE IS REVERSIBLE. TO CHANGE HAND SEE OTHER SIDE.

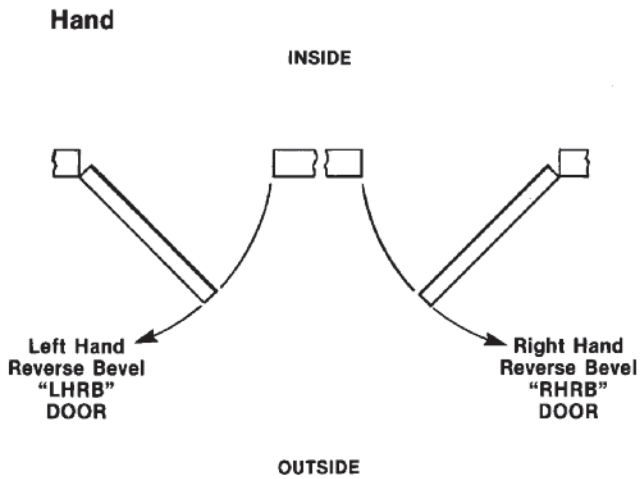

## TO CHANGE HAND

- A** UNSCREW PIVOT AND REMOVE SPRING SUPPORT ASSEMBLY
- B** UNSCREW PIVOT REMOVE LATCH BOLT AND REASSEMBLE IT ON OPPOSITE SIDE
- C** REASSEMBLE SPRING SUPPORT ASSEMBLY ON OPPOSITE SIDE (MAKE SURE SPRING RIDES ON LATCH BOLT TAIL)

