


## Rockwood 18BFB Bottom Fire Bolt

The global leader in  
door opening solutions

For Installation Assistance, Call Rockwood Products at 800-458-2424 • [www.rockwoodmfg.com](http://www.rockwoodmfg.com)

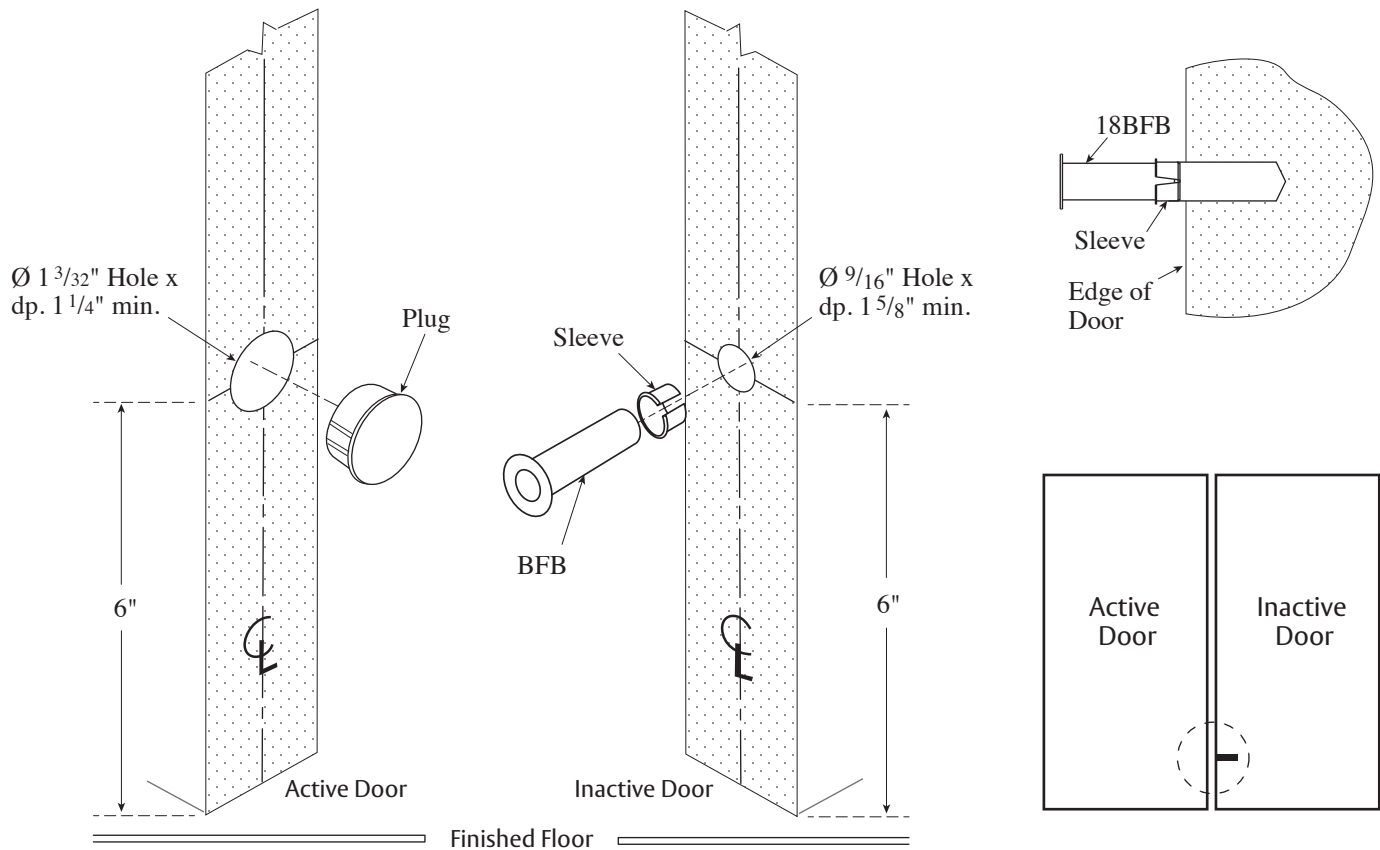

NOTE: Thermal pin to be centered in door thickness; Gap between thermal pin and receiving hole 1/2" max.

### Installation Instructions

#### Inactive Door

1. Measure 6" from bottom of the Inactive Door.
2. Drill a Ø 9/16" hole for 18BFB.
3. Install 18BFB by striking squarely with a hammer.

#### Active Door

1. Drill a Ø 1 3/32" hole for Plug at the same height as the 18BFB.
2. Install plug in door by striking with a hammer.

**NOT TO SCALE**

**IMPORTANT:** The BFB will project during a fire. Do not cover with any edge mounted door hardware.